

ALARM.COM® Slim Line II Doorbell Camera

Visit alarm.com/doorbell for installation instructions.

Push Notifications

Use your mobile app to set up instant alerts:



Be notified when the doorbell button is pushed.



Be notified when the Doorbell Camera detects motion

Tap on a doorbell notification to open the call screen so you can see and speak with your visitors.

QUICK TIP

To respond to doorbell notifications even faster, check "Keep me logged in" on your mobile app login screen.

Video Recordina Rules

Use your mobile app to choose which events trigger your Doorbell Camera video clip recordings:



Button Pushed

Record when the doorbell button is pushed.



Record when the Doorbell Camera detects motion



Record when a sensor in your Alarm.com system is activated or an alarm is triggered.



You can view recorded clips on your mobile app and Customer Website.

LED REFERENCE GUIDE

Normal Operation

Green | Solid

Ready and working normally

Use your mobile app or Customer Website to choose a custom color in place of default green.

White | Solid

In call mode

A call has been initiated or is occurring.

Requires Attention



Blue | Rapid double blink

No Wi-Fi connectivity Check your Internet connection.

Power supply issue Contact your installer.

Troubleshooting

Red | Green | Alternating blink

Push & hold ~60 sec until blinking

Wi-Fi Access Point mode

Connect to the camera's temporary network and use the mobile app to update Wi-Fi settings.

Blue | Blinking

Push & hold ~70 sec until blinking

Yellow | Blinking

Push & hold ~80 sec until blinking

Power cycle

Reboots the camera.

Factory reset

Use to factory reset the camera.

Deletes all Wi-Fi and configuration information.

QUESTIONS?

Contact your installer or visit www.alarm.com/doorbell for helpful videos and a full LED reference guide.

If you are a professional installer, visit answers.alarm.com.